



Aton CL103 User guide

The handset at a glance



- 1 Direct dialing keys (I to III)
- 2 **Display** in idle status (example)
- 3 **Battery charge level**
(1/3 charged to fully charged)
flashes: battery almost flat
flashes: battery charging
- 4 **Display keys** (page 12)
- 5 **Control key** (page 12)
- 6 **End call key, On/off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 7 **Hash key**
Keypad lock on/off (press and hold in idle status, page 12)
Insert a pause (press and hold for dialling)
Switch between uppercase/lowercase letters and digits for text entry (page 32)
- 8 **Microphone**
- 9 **Recall key**
Enter flash (press and hold)
- 10 **Connection socket for headset**
- 11 **Talk key**
Answer a call, start dialling
- 12 **Handsfree key**
Toggle between earpiece and handsfree mode
Lights up: handsfree activated
– Flashes: incoming call
- 13 **Voice portal key**

Base station at a glance



- 1 Registration/paging key

Contents

The handset at a glance	1
Base station at a glance	1
Safety precautions	4
Special features of the Aton CL103	5
Aton CL103 – more than just a telephone	5
First steps	5
Pack contents	5
Installing the base station	5
Connecting the base station	6
Setting up the handset for use	6
Menu tree	9
Making calls	11
Making an external call/	
ending a call	11
Answering a call	11
Calling line identification	11
Handsfree operation	11
Operating the handset	11
Switching the handset on/off	11
Activating/deactivating	
the keypad lock	12
Control key on the handset	12
Display keys	12
Returning to idle status	12
Menu guidance	13
"Swisscom Voice Portal" key	13
Correcting incorrect entries	13
Using the directory, direct dialling keys and lists	14
Directory	14
Direct dialling keys	15
Last number redial list	15
Opening the message list with	
the display key	16
SMS (text messages)	18
Registering with the	
registration wizard	18
Writing/sending an SMS	19
Receiving an SMS	20
Setting up the SMS centre	21
SMS to a PABX	21
Activating/deactivating the	
SMS function	21
SMS troubleshooting	22
Using the network mailbox (Com-box)	23
Using the network mailbox for	
setting speed dialling	23
Viewing the network mailbox	
message	23
Using several handsets	23
Registering handsets	23
Locating a handset ("Paging")	24
Making internal calls	24
Listening in to an external call	25
Handset settings	25
Changing the display language	25
Screensaver	25
Auto answer	25
Adjusting the loudspeaker volume ...	25
Changing ringtones	26
Activating/deactivation	
suppression of the first ringtone	26
Advisory tones	26
Using the handset as an	
alarm clock	27
Restoring the handset default	
settings	27
Base station settings	27
Changing the system PIN	27
Restoring the base station to	
factory settings	28
Operating the base station on the PABX	28

Appendix	29
Symbols and typographical conventions used	29
Care	29
Contact with liquid	29
Faults and Self-help with Troubleshooting	29
Warranty/Maintenance/Repair/Authorisation	30
Repair/Maintenance	30
Technical data	31
Writing and editing a text message ..	32
Accessories	33
Wall mounting for base station .	34
Index	35

Safety precautions

Caution:

Read the safety precautions and the user guide before use.

Explain their contents to your children as well as the potential hazards associated with using the telephone.



Only use the mains adapter supplied, as indicated on the underside of the base station.



Only fit the **recommended rechargeable batteries** of the same type (page 31)! In other words, do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



Fit rechargeable batteries with the correct polarity and use them according to this user guide (polarity symbols can be seen in the handset's battery compartment, page 6).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, for example doctor's surgery.



Do not hold the reverse side of the handset to your ear if the handset is ringing or if the handsfree function is switched on. Otherwise, you risk developing serious, permanent hearing damage.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station in bathrooms or shower rooms. The handset and base station are not splash proof (page 29).



Do not use the phone in environments with a potential explosion hazard, for example auto paint shops.



If you give your Aton CL103 to someone else, make sure you also give them the user guide.



Information about disposal

At the end of its service life this product must not be disposed of among the normal household refuse. Instead, it must be handed in at a sales outlet or at a collection point for recycling electrical and electronic devices in accordance with regulations governing the return, taking back and disposal of electrical and electronic devices (ORDEA).

The materials can be recycled as indicated. By recycling materials and reusing or utilising old appliances in any other way you are making an important contribution to the protection of the environment.

Note:

- Not all of the functions described in this user guide are available in all countries. CLIP (Calling Line Identification Presentation), SMS (Short Message Services) and "Swisscom Voice Portal": these functions depend on the network provider.

Special features of the Aton CL103

- ◆ Large keys
- ◆ Text and symbols are shown clearly in large type on the display
- ◆ Jumbo Font
- ◆ Direct dialling keys
- ◆ Compatibility with hearing aids (HAC – Hearing Aid Compatibility)
- ◆ Connection for headset (headset included in scope of delivery)
- ◆ Voice portal key
- ◆ ECO mode (low radiation mode)
- ◆ Switch-mode mains adapter (energy saving)

Note:

ECO mode (low radiation mode)

Your telephone is fitted with radiation reducing ECO mode. This means that once the handset is placed in the base station, the transmitting power between the handset and base station is reduced to a minimum.

ECO mode is only active if a handset is registered on the base station.

ECO mode may be impaired in some cases by other wireless DECT products, which are within its range.

Aton CL103 – more than just a telephone

Your phone not only enables you to send and receive text messages over the fixed network and store up to 100 telephone numbers (page 14) – it can do a whole lot more:

- ◆ You can programme the direct dialling keys of your phone with important phone numbers. The number is then dialled by simply pressing a key (page 15).
- ◆ Use the handsfree function (page 11) to keep your hands free when making a call.

- ◆ Use your handset as an alarm clock (page 27).

Have fun using your new telephone!

First steps

Pack contents

The packaging contains a Aton CL103 base station, a handset, a mains adapter, a telephone cable, two batteries, a battery cover, a belt clip, a user guide and a headset.

Installing the base station

The base is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C.

Set up the base station at a central point in the apartment or house.

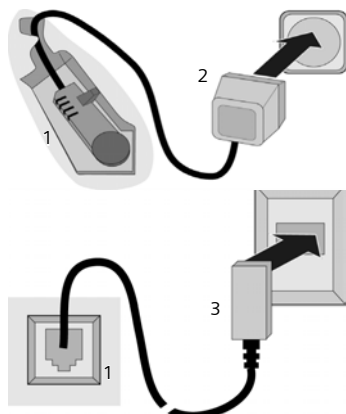
Please refer to the end of the user guide for information on wall-mounting the base station.

Please remember:

- ◆ Never expose the telephone to heat sources, direct sunlight, other electrical appliances.
- ◆ Protect your Aton CL103 from moisture, dust, corrosive liquids and vapours.

Connecting the base station

- **First** connect the mains adapter and **then** the phone jack as shown below and place the phone cord in the cord recess.

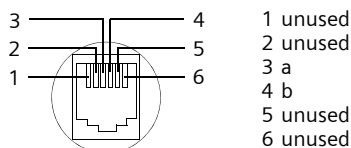


- 1 Underside of the base (section)
- 2 Mains adapter 230 V
- 3 Phone jack with phone cord

Please remember:

- ◆ Keep the mains adapter **plugged in at all times** for operation as the phone does not work without mains connection.
- ◆ If you buy a replacement phone cord from a store ensure that the phone jack is connected correctly.

Correct phone jack assignment



Setting up the handset for use

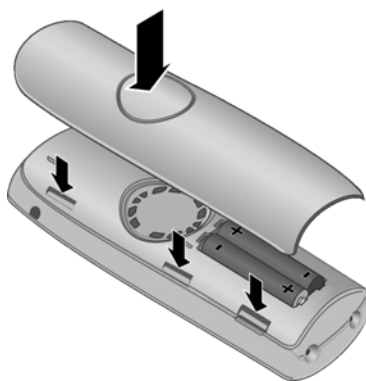
Fitting the batteries and closing the cover

Caution:

Use only the rechargeable batteries recommended on page 31. In other words, never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the outer casing of the batteries or accumulators could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- Fit the batteries with the correct polarity (see diagram).

The polarity is indicated in the battery compartment.



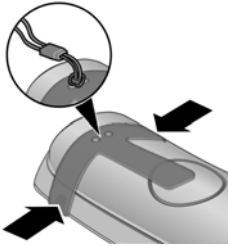
- First align the notches on the side of the battery cover with the protrusions of the inside of the casing.
- Then press down the cover so that it clicks into place.

Attaching the belt clip

There are notches for attaching the belt clip on the side of the handset at the same height as the display.

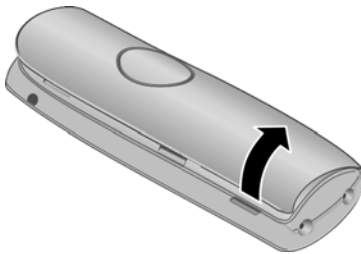
- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.

You can also attach a cord for carrying the handset in your hand or wearing it around your neck.



Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Reach into the housing cavity and pull the battery cover upwards.



Placing the handset in the base station and registering

Requirement: the handset must not already be registered on **any** base station.

Registering the handset on the Aton CL103 base station occurs automatically.

- ▶ Place the handset in the charging cradle of the base station with its **display facing forward**.

You will hear a confirmation tone.

Automatic registration can take up to 5 minutes. While registration is in progress the screen displays **Registering**. The handset is assigned the lowest unassigned internal number (1–4). If several handsets are registered on the base, the internal number is shown in the display after registration, for example 2. This means that the handset has been assigned the internal number 2.

Notes:

- Automatic registration is only possible if the base station on which you wish to register the handset is not being used to make a call.
- A key press cancels automatic registration.
- If four handsets are already registered on the base station there are two options:
 - The handset with the internal number 4 is in idle status: the handset you wish to register is assigned the number 4. The handset that was previously number 4 is de-registered.
 - The handset with the internal number 4 is being used: the handset you wish to register cannot be registered.
- If automatic registration does not work the handset will have to be registered manually (page 23).

 


- ▶ To charge the batteries, leave the handset in the charging cradle on the base station.

Notes:

- The handset may only be placed in the base/charging cradle provided for it.
- If the handset has switched itself off because the batteries are flat and is then placed in the base/cradle, it will switch itself on automatically.

For questions and problems see page 29.

Initial charging and discharging of batteries

Battery charging is indicated in the top right of the display by a flashing battery icon ,  or . During handset operation, the battery icon indicates the charge status of the batteries (page 1).

The correct charge status can only be displayed when the batteries are first fully charged **and** discharged through use.

- ▶ To do this, leave the handset in the base without interruption until the battery icon stops flashing in the display (approx. 13 h).
- ▶ Once the batteries are fully charged, remove the handset from the base and do not put it back again until the batteries are fully discharged.

Note:

After the first battery charge **and** discharge you may replace your handset in its base after every call.

Please remember:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and re-insert them.
- ◆ The batteries may warm up as they are charging. This is not dangerous.
- ◆ After a time the charge capacity of the batteries will decrease for technical reasons.


Note:

You will find explanations for the symbols and typographical conventions used in this user guide in the appendix, page 29.


Setting the date and time

Menu → **Settings** → **OK** → **Date/Time**
→ **OK**



Enter the day, month and year with 6 digits and press **OK**. Use  to move between the fields.



Enter hours and minutes with 4 digits (e.g. 0 7 1 5 for 07.15 hrs) and press **OK**. Use  to move between the fields.

Once the phone is registered and the time set, the idle display looks as shown on page 1.

Your phone is now ready for use.

Menu tree

There are two ways to select a function:

Using number combinations ("shortcut")

- ▶ To open the main menu, press **Menu** with the handset in idle status.
- ▶ Enter the number combination that is in front of the function in the menu tree.
- ▶ **Example:** **Menu** **6** **3** for "Set handset language".

Scrolling through the menus (see also page 29)

- ▶ To open the main menu, press **Menu** with the handset in idle status.
- ▶ Scroll to the required function with the control key and press **OK**.

1 Directory

2 Calls

3 SMS

3-1	Write Message				
3-2	Incoming 00+00				
3-3	Outgoing				
3-4	Settings	3-4-1	Service Centres	3-4-1-1	Service Centre 1
				...	[to]
				3-4-1-3	Service Centre 3
		3-4-2	Subscribe SMS		

4 Alarm

4-1	Activation
4-2	Wakeup time

5 Audio Settings

5-1	Handset Volume		
5-2	Handsfree Volume		
5-3	Ringer Volume		
5-4	Ringer Melody	5-4-1	External Calls
		5-4-2	Internal Calls
		5-4-3	Alarm Clock
5-5	Advisory Tones		
5-6	Battery Low	5-6-1	Off
		5-6-2	On
		5-6-3	During Call
5-7	Headset Volume		

Menu tree

6 Settings

6-1	Date/Time		
6-2	Direct Diall. Keys		
6-3	Language		
6-4	Jumbo Font		
6-7	Handset	6-7-1	Screen Saver
		6-7-2	Auto Answer
		6-7-3	Register Handset
		6-7-4	Reset Handset
6-8	Base	6-8-2	System PIN
		6-8-3	Base Reset
		6-8-4	Listening in


 
7 Voice Mail



7-1	Set Key 1	7-1-1	Network Mailbox
-----	-----------	-------	-----------------

Making calls


Making an external call/ending a call

External calls are calls using the public telephone network.


 (Enter phone number) → .

The number is dialled. (You can also **first** press the  key [ringtone] and then enter the number.) The earpiece volume can be adjusted during the call with the  key.

 

End a call/cancel dialling:

Press the end call key .

Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can answer the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .
- ▶ Press the display key **Accept**.

If the handset is in the base and the **Auto Answer** function is activated (page 25), the handset will answer a call automatically when you lift it out of the base.

If the ringtone is intrusive, press **Silence**. The ringtone is switched off for this call. You can answer the call so long as it is displayed on the screen.

Calling line identification

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

- ◆ Your network provider supports CLIP, CLI:
 - CLI (calling line identification): the caller's number is transmitted
 - CLIP (calling line identification presentation): the caller's number is displayed

Displaying the caller's number



 

The phone number of the caller is shown on the display or also the name of the caller if the name has been stored in the directory.

Requirements:

see Calling line identification.

Extern. Call appears on the display if calling line identification presentation is not working, while **Withheld** is displayed if calling line identification has been suppressed by the caller.

Handsfree operation

You can make calls immediately in handsfree mode (the  key lights up permanently) after entering the phone number by pressing the handsfree key . Toggle between earpiece and handsfree mode during a call by pressing the  key. The volume can be adjusted during handsfree operation with the  key.

Operating the handset

Switching the handset on/off



Press and hold the end call key.

You will hear the confirmation tone.

Activating/deactivating the keypad lock



Press and **hold** the hash key.

You will hear the confirmation tone. The icon appears in the display when the keypad lock is activated.

Note:

The handset displays an advisory message if you press a key by accident while the keypad lock is on. To deactivate the keypad lock, press the hash key and hold.

Control key on the handset



1 Control key

The side of the control key you have to press in the given operating situation is shown in black (top, bottom) in this user guide. Example: for "press the top of the control key".

The control key has a number of different functions:

When the handset is in idle status



Open the directory.



Adjust the ringer melody volume of the handset (page 26).

In lists and menus



Scroll up/down line by line.

In an input field



Move the cursor **left** or **right**.

During an external call



Open the directory.

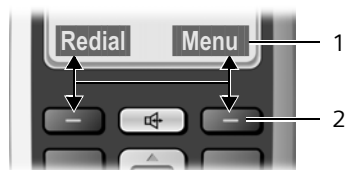


Adjust loudspeaker volume for earpiece and handsfree mode.

Display keys

The current display functions are shown in the bottom display line in reverse video. The functions of the display keys change depending on the particular operating situation.

Example:



1 Current display key functions

2 Display keys

The most important display symbols are:

Back

Go back one menu level or cancel operation.

Menu

Open the main menu or a context-dependent menu.

OK

Confirm highlighted selection.

Delete

Delete key: backspace delete one character at a time.

Redial

Open the last number redial list.

Returning to idle status

You want to return to idle status from anywhere in the menu: Press the end call key and **hold**.

If you do not press any key, the display will **automatically** revert to idle status after 2 minutes.

Changes that you have not confirmed/stored by pressing **OK** will be rejected.

For an example of the display in idle status: page 1.


Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- To open the main menu, press **Menu** with the handset in idle status.

Accessing a function


- Scroll to the function with the control key  and press **OK** or enter the digit that appears before the function in the menu overview (page 9).


The corresponding submenu (the next menu level) is opened.

Submenus

The functions in the submenus are displayed as lists.

To access a function:

- Scroll to the function with the control key  and press **OK** or enter the digit combination that appears before the function in the menu overview (page 9).

Briefly pressing the end call key  returns you to the previous menu level / cancels the operation.

"Swisscom Voice Portal" key



Press the direct dialling key.

You will be directly connected to the Swisscom Voice Portal.

The access number can be reprogrammed.

Note:

This key allows you to connect to the Swisscom Voice Portal, where you can activate additional services such as call diversion (Service 21, 61 or 67), call waiting (Service 43) or three-party conference with a simple voice command. You can also use voice command to access current sport, news and weather information.

Correcting incorrect entries

- ◆ Navigate to the wrong input with the control key if **⌵** is displayed.
- ◆ Press **Delete** to delete the character to the left of the cursor.
- ◆ Insert new character to the left of the cursor.
- ◆ When entering the time and date etc., edit the flashing character.

You will find explanations for the symbols and typographical conventions used in this user guide in the appendix, page 29.


Using the directory, direct dialling keys and lists

A directory, last number redial list, SMS list as well as calls list are available.

You can save up to 100 entries in the directory.

You can create a personalised directory for your own individual handset. However, you can send the list or individual entries to other handsets (page 14).

Directory




You can store numbers and the associated names in the **directory**. With the handset in idle status, open the directory by pressing the  key.

Length of an entry




Number: max. 22 digits

Name: max. 16 characters

Storing the first number in the directory

 → **Dir empty** **New entry?** → **OK**
→  (Enter number) → **OK**
→  (Enter name) → **OK**



Storing a number in the directory

 → **Menu** → **New Entry** → **OK**
→  (Enter number) → **OK**
→  (Enter name) → **OK**



 
Selecting a directory entry

 Open the directory.

You have the following options:

- ◆ Use  to scroll to the entry until the required name is selected.
- ◆ Enter the first character of the name, or scroll to the entry with .



Dialling with the directory

 →  (Select entry; page 14) → 


Managing directory entries

You have selected an entry (page 14).

Editing entries

Menu → **Edit Entry** → **OK**
→  (Change number if required)
→ **OK**
→  (Change name if required) → **OK**

Using other functions

The following functions can be selected with **Menu** → :

Use Number

Edit or add to a stored number. Then dial or use other functions with **Menu**.

Show Number

Show number.

Delete Entry

Delete selected entry.

Send Entry

Send a single entry to another handset (page 14).

Delete List

Delete **all** directory entries.




Send List

Send the complete list to another handset (page 14).

Sending the directory to another handset

Requirements:

- ◆ The sending and receiving handsets must both be registered on the same base station.
- ◆ The other handset and base station can send and receive directory entries.

 →  (Select entry; page 14)
→ **Menu** → **Send Entry / Send List** → **OK**
→  (Enter the internal number of the receiving handset) → **OK**

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Adding a displayed number to the directory

You can copy any numbers to the directory that appear in a list, for example the calls list or the last number redial list.


A number is displayed.

Menu → **Copy to Directory** → **OK**

► Complete the entry (page 14).

Direct dialling keys


You can store particularly important phone numbers, for example emergency numbers, under the 3 free **direct dialling keys**.

You dial the stored direct dialling number by pressing the corresponding direct dialling key and the talk key .

Refer to the **font table** (page 32) for information on how to enter the text correctly.

Storing/changing direct dialling keys

You can assign external phone numbers and the internal call function to the direct dialling keys.

Menu → **Settings** → **OK** → **Direct Diall. Keys** → **OK** → I: <no entry> →  Select direct dialling key (I to III)

Entering/changing an entry

You have selected a direct dialling key.

Menu → **Edit Entry** → **OK**




Enter or edit the number if required and press **OK**.



Enter or edit the name if required and press **OK**.

Using other functions

The following functions can be selected with **Menu** → :

Delete Entry

Delete selected entry.

Call. Home Internal

Pressing this key results in all registered handsets being called.

Use Number

Edit or add to a stored number. Then dial or use other functions with **Menu**.

Note:

When a phone number is displayed on the screen, you can programme this number onto an unassigned direct dialling key by pressing and **holding** the relevant direct dialling key.

Last number redial list

The last number redial list contains the ten numbers last dialled with the handset (max. 22 digits). If one of the numbers is in the directory, then the corresponding name will be displayed.

Dialling from the last number redial list

Redial

Press the display key.



Select an entry.



Press the talk key. The number is dialled.

Managing entries in the last number redial list

Redial


Press the display key.



Select an entry.

Menu

Press the display key.

The following functions can be selected with :


Use Number (as in the directory, page 14)

 
Copy to Directory (as in the directory, page 14)

 


Delete Entry (as in the directory, page 14)

Delete List (as in the directory, page 14)

Opening the message list with the display key

You can use the display key  to open the SMS list, the network mailbox (if your network provider supports this function and the network mailbox is set up for speed dialling, page 23) and the calls list.

An advisory tone sounds as soon as a **new entry** appears in a list. A message appears in the display. If you press the display key , you will see all the lists that contain new messages. If only one list contains new messages, this list will be opened automatically. Press any key and the message advising of new messages is no longer shown on the display.

The display key  is faded out when the list is exited. Access to the network mailbox can be initiated with key  on the handset (if the handset is set up for speed dialling), while the SMS list and the calls list can be opened via the menu (see page 9). The display key  is available again after a new entry in one of the lists.

Note:

If calls are stored in the network mailbox you will receive a message if the appropriate settings have been made (see the network mailbox instructions of your network provider).

Calls list

Requirement: CLIP (page 11)

The calls list contains

- ◆ missed calls

Depending on the list type selected, all numbers of the last 20 missed calls are stored.

The list is displayed as follows:

Calls List: 01+02

Number of new messages + number of old, read messages.

Selecting the list type for the calls list

Menu →      → Enter
digits:  = missed calls → **OK**

The entries in the calls list are preserved if you change the list type.

Opening the calls list

 → **Calls List: 01+02** → **OK**



Select entry.

The last call received is displayed as the first entry in the **calls list**.

List entry

Example of a list entry:

New Call

1234567890

Back



Menu

- ◆ Status of entry

New Call: new missed call.

Old Call: entry already read.

Only for list type "all calls":

Call Recv.: Call was answered

- ◆ Number or name of caller

You can add the number of the caller to the directory (page 15).

You can delete the current entry with

Menu → **Delete Entry**.

You can show the date and time of the call (if set, page 8) with **Menu** → **Date and Time**.

Dialling from the calls list

Open the calls list (see page 16).



Select an entry.




Press the talk key. The number is dialled.

Deleting the calls list

Caution! All **old and new** entries will be deleted.

Menu → **Calls List:** → **OK** → **Menu**

→ **Delete List** → **OK**

▶  Press and **hold** (idle status).

SMS (text messages)

Your unit is supplied ready for you to send text messages immediately.

Note:

When supplied, the number to access the Swisscom SMS centre (062 210 00 0) is already configured.

Requirements:

- ◆ Calling line identification presentation (CLIP, page 11) is enabled for your phone connection.
- ◆ Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.

Text messages are exchanged between SMS centres that are operated by service providers. You must enter the SMS centre through which you wish to send and receive in your unit. You can receive SMS from **every** SMS centre that is entered if you have registered with your service provider. The registration wizard (page 18) will help you to register.

Your text message is sent through the SMS centre that is active. However, you can activate any other SMS centre for sending a current message (page 21).

If no SMS centre is entered, the SMS menu only consists of the entry **Settings**. Enter an SMS centre (page 20).

Please remember:

- ◆ If your phone is connected to a PABX, please read page 21.
- ◆ You must also have registered with your service provider for receiving SMS text messages.
- ◆ Each incoming SMS is signalled by a single ring (ringtone as for external calls). If you accept such a call, the SMS will be lost. To prevent this, suppress the first ringtone for all external calls (page 26).

Registering with the registration wizard*

You can use the registration wizard to register with all service providers whose number you have entered to send and receive SMS messages.

Requirement:

- ◆ You must have stored a number for at least one SMS centre.

When you call up the SMS menu for the first time, the wizard automatically registers you with accessible SMS centres whose number you have entered. You can also use the registration wizard to register with SMS centres at a later time.

On first call: **Menu** → **SMS** → **OK**

Later: **Menu** → **SMS** → **OK** → **Settings**
→ **OK** → **Register to allServices?** → **OK**

You can now receive text messages from any of the SMS centres whose number you have entered (page 20).

* Depends on provider. Not supported in the Swisscom network at present.

Writing/sending an SMS

An SMS may contain up to 160 characters.

Writing/sending an SMS

Menu → **SMS** → **OK** → **Write Message**
→ **OK**



Write an SMS. For how to enter the text, see page 32.

Menu → **Send Text**

Select and press **OK**.



Enter the number with prefix (including your local area code) from the directory or key it in manually, and press **OK**. For SMS to an SMS mailbox: put the mailbox ID at the **end** of the number. The SMS is sent.

Note:

If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.

Draft message list

In the draft message list, you can save, edit later and send an SMS.

Saving an SMS in the draft message list

 
You are writing an SMS (page 19).

Menu → **Save Text** → **OK**

Opening the draft message list

Menu → **SMS** → **OK** → **Outgoing** → **OK**

The first entry in the list is displayed, e.g.:



01/01: Current number/total number of SMS text messages

Reading or deleting SMS messages

► Open the draft message list.




Select SMS.

Menu

Press the display key.

You have the following options:

Read SMS

Select and press **OK** to read the SMS message. Scroll in the SMS using .

Delete Entry

Select and press **OK** to delete the SMS message.

Date/Time

Select and press **OK** to show when the SMS message was written.

Delete List

Select and press **OK** to delete all SMS messages in the draft message list.

Writing/editing an SMS

You are reading an SMS in the draft message list.

Menu

Press the display key.

You have the following options:

Write Message

Write and then send a new SMS (page 19) or save.

Use Text

Edit the text of the saved SMS and then send (page 19).

Receiving an SMS

All received text messages are saved in the incoming message list. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

The display tells you if the SMS memory is full.

- ▶ Deleting text messages you no longer require (page 20).

Incoming list

The incoming message list contains:

- ◆ All received SMS messages, starting with the latest.
- ◆ SMS messages that could not be sent on account of an error.

New text messages are signalled on all handsets by a message in the display and an advisory tone.

Opening the incoming message list with the display key


Press .

The incoming message list is displayed as follows (example):

SMS: 01+05

01+05: The number of new + the number of old, read messages

An entry in the list is displayed as follows for example:

New 01/02
1234567890
Back  Menu

01/02: Current Number of the SMS currently in the display / total number of new SMS messages

Opening the incoming message list via the SMS menu

Menu → SMS → OK → Incoming 01+05
→ OK

Reading or deleting SMS messages

- ▶ Open the incoming message list.




Select SMS.

Menu

Press the display key.

You have the following options:

Read SMS

Select and press **OK** to read the SMS message. Scroll through the SMS messages using . A new SMS message which you have read acquires the status **Old**.

Delete Entry

Select and press **OK** to delete the SMS message.

Copy to Directory

Select and press **OK** to copy the sender's number to the directory.

Date and Time

Select and press **OK** to show when the SMS message was received.

Delete List

Select and press **OK** to delete all SMS messages in the incoming message list.

Replying to or forwarding text messages

You are reading an SMS (page 20).

Menu

Press the display key.

You have the following options:

Reply

Write and send a reply SMS directly (page 19).

Use Text

Edit the text in the SMS and then send it (page 19).

Send Text

Forward the text of an SMS to another recipient (page 19).

Setting up the SMS centre

Entering/changing SMS centres

Note:

The access number (062 210 00 0) of the Swisscom SMS Centre is preprogrammed in the delivery version.

- ▶ Before changing or entering a new service number, make sure to find out about service offers and special features of your service provider.

Menu → **SMS** → **OK** → **Settings** → **OK**
→ **Service Centres** → **OK**



Select the SMS centre (e.g. **Service Centre 1**) and press **OK**.

You have the following options:

Activ. send Centre

If the SMS messages are to be sent through this SMS centre, press **OK** to activate the SMS centre (**on**). If a different SMS centre was active previously, then this will be deactivated. For the SMS centres 2 and 3, the setting only applies to the next SMS.

Centre No.

Enter the number of the SMS centre and press **OK**.

Sending an SMS through another SMS centre

- ▶ Activate the SMS centre (2 or 3) as the active send centre (page 21).
- ▶ Send the SMS.

This setting only applies to the SMS that is being sent next. Afterwards the setting automatically reverts to **Service Centre 1**.

SMS to a PABX

- ◆ You can only receive an SMS when **calling line identification presentation** (page 11) is forwarded to the extension of the **PABX (CLIP)**. The CLIP of the phone number for the SMS centre is evaluated in your **Aton CL103**.
- ◆ Depending on your PABX, you may have to add the access code (external line prefix) before the number of the SMS centre.
If in doubt, test your PABX, for example by sending an SMS to your own phone number: once with the access code and once without.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS on ISDN PABXs is only possible via the MSN number assigned to your base station.

Activating/deactivating the SMS function

When you switch off you cannot send or receive any further SMS text messages with your phone.

Settings you have made for sending and receiving text messages (the numbers of SMS centres) and any entries in the incoming message and draft message lists will be retained even after the function is deactivated.

Menu → **6** msg → **8** serv → **9** msg → **2** abc → Enter digits: **0+** = Deactivate the SMS function; **1** ad = Activate the SMS function (default status) → **OK**

SMS troubleshooting

Error codes when sending

If an SMS cannot be sent for a longer period of time, it is moved to the incoming message list and given the status Err. XX.

EO	Calling line identification permanently withheld (CLIR) or calling line identification presentation not working.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed, see self-help.

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

You cannot send messages.

1. The CLIP service (calling line identification presentation, page 11) is not working.
 - ▶ Ask your service provider to check this service.
2. Text message transmission has been interrupted (e.g. by a call).
 - ▶ Re-send the text message.
3. Network provider does not support this feature.
4. No number or an invalid number is entered for the SMS centre activated as the send centre.
 - ▶ Enter phone number (page 20).

The SMS message is played back.

1. The "display call number" service is not activated.
 - ▶ Ask your service provider to enable this service (chargeable).
2. Mobile phone/fixed network operator and network SMS service provider have not agreed on a cooperation.
 - ▶ Obtain information from your network SMS service provider.

Messages are only received as voice messages during the day.

The terminal is stored in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.

- ▶ Register your terminal (again) for SMS reception (page 18).

You cannot access the SMS functions on your handset.

Another handset that is registered at the same base station is currently using the SMS functions.

- ▶ Wait until there is no other handset using the SMS functions.

Using the network mailbox (Combox)

The network mailbox is your network provider's answering machine. You cannot use the network mailbox unless you have **applied** to your network provider.

Using the network mailbox for setting speed dialling

With speed dialling, you can direct dial the network mailbox.

The integrated answering machine is pre-configured for speed dialling. You only have to enter the number.

Configuring the network mailbox for speed dialling and entering the network mailbox number

Menu → **Voice Mail** → **OK** → **Set Key 1**
 → **OK** → **Network Mailbox** → **OK** (if on)
 → Enter the number of the network mailbox → **OK**

This setting is now valid for all registered handsets.

Calling the network mailbox



Press and **hold**. This connects you directly to the network mailbox.

Viewing the network mailbox message

When a message arrives for you, you get a call from the network mailbox. If you have requested Calling Line Identification, the display shows the network mailbox number. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number will be stored in the list of missed calls (page 15).

Using several handsets

Registering handsets

You can register up to four handsets on your base station.

Automatic registration of the handset on the Aton CL103 base station Aton CL103, see page 7.

Manual registration of the handset on the Aton CL103 base station

You must activate manual registration of the handset on both the handset and the base station.

After it has registered, the handset returns to idle status. If several handsets are registered on the base, the internal number is shown in the display after registration, e.g. 2.

The registration process is cancelled after 60 seconds. If the handset has not registered within this time, repeat the process.

On the handset

Menu → **Settings** → **OK** → **Handset** → **OK**
 → **Register Handset** → **OK** →

Enter system PIN of base station (default status: 0000) → **OK**

On the base station

 


Press and hold the registration/paging key on the base station (page 1) (min. 1 sec.).

Registering other handsets

 
You can register handsets for other devices with GAP functionality as follows.

On the handset: Start to register the handset as described in its user guide.



On the base station: Press and **hold** the registration/paging key  on the base station (page 1) (min. 1 sec.).

Locating a handset ("Paging")

You can locate your handset using the base station.

- ▶ Press the registration/paging key  on the base station (page 1) **briefly**.
- ▶ All handsets will ring at the same time ("paging"), even if the ring tones are switched off.



Ending paging

Briefly press the registration/paging key  on the base station (page 1) or press the talk key  on the handset.

Making internal calls

Internal calls are free calls between handsets that you have registered on the same base station. In order to be able to initiate an internal call, one of the speed dialling keys must be programmed for internal calls (see page 15).

Calling other handsets

 
 
Press the relevant speed dialling key ( ... ) which is programmed for internal calls when the handset is in idle mode. Acknowledge the query **Call home internal?** with **Yes**. You will see the message **Calling all handsets** on the display.

Note:

If no user connects, the handset switches to idle mode after 3 minutes.

Answering an internal call

Your phone rings and the internal number of the caller is displayed on the screen, for example 2.

Press the talk or handsfree key  /  on the handset to answer the call.

Ending a call


Press the end call key  on the handset.

Transferring a call to another handset/ internal consultation


You are calling an **external** subscriber.

- ▶ Initiate an internal call, see "Calling other handsets" auf Seite 24. (You can press the display key **Back** during the internal call and are connected again to the external subscriber.)

When an internal party answers:


 
- ◆ **To transfer** to the internal party, press the end call key  on the handset.
- ◆ The internal party must end the call **to terminate the consultation**. You are reconnected with the external caller.

Note:

You can also press the end call key  **before** connecting the internal caller. If the internal party does not answer, or their phone is in use, the call will automatically return to you.

Accepting a waiting call

If you get an **external** call while conducting an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if calling line identification is enabled.

- ▶ Press the end call key  on the handset to end the internal call.
- ▶ Press the talk key  on the handset to answer the external call.

Listening in to an external call

 
You want to listen in to an existing external call.

Requirement: The **Listening in** function must be activated.

Activating/deactivating the function:


Menu → **Settings** → **OK** → **Base** → **OK**
→ **Listening in** → **OK** (IV = on)

Listen in to call:

Press the talk key  on the handset. All participants hear a signal tone. **Conf. Call** is shown on the handset display.

Ending listening in:

Press the end call key  on the handset so that all participants hear a signal tone.


If the **first** internal participant presses the end call key , the handset that has 'listened in' remains connected to the external caller.

Handset settings

Your handset comes with default settings. You can change the individual settings.


Changing the display language

You can view the display texts in different languages.

Menu → **Settings** → **OK** → **Language**
→ **OK** →  (Choose language) → **OK**

The current language is indicated by IV.

If you accidentally choose a language you do not understand:


Menu → **6 min** **3 sec** → 
(Choose language) → **OK**

Screensaver

When this function is activated, the time is shown in digital in idle mode, filling the entire display.


Menu → **Settings** → **OK** → **Handset** → **OK**
→ **Screen Saver** → **OK** (IV = on)

Auto answer

When this function is activated, when a call arrives you can simply lift the handset out of the base without having to press the talk key .

Menu → **Settings** → **OK** → **Handset** → **OK**
→ **Auto Answer** → **OK** (IV = on)

Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree talking and the earpiece volume to five different levels (1–5; e.g. volume 2 = .

Menu → **Audio Settings** → **OK** → **Handset**
Volume / Handsfree Volume → **OK**



Adjust the volume and press **OK**.

Adjust the volume during a call:


 


Press the control key.



Adjust the volume and press **OK**.

Changing ringtones

- ◆ **Volume:**
Five volume levels (1-5; e.g. volume 2 = ) and "off" (volume 0 = ).
- ◆ **Melody:**
List of pre-loaded ringer melodies. The first three melodies are the "classical" ring tones.

You can also set different melodies for the following functions:

- ◆ **External Calls:** For external calls
- ◆ **Internal Calls:** For internal calls
- ◆ **Alarm Clock:** For the alarm clock

Setting ringer volume

The ringer volume is the same for all types of signalling.


 
Menu → **Audio Settings** → **OK** → **Ringer Volume** → **OK** →  (Adjust volume) → **OK**

Or in idle status:

 **Press briefly** →  (Adjust volume) → **OK**

Setting ringer melody

Set different ringer melodies for external calls, internal calls and the alarm clock.

Menu → **Audio Settings** → **OK** → **Ringer Melody** → **OK** → **External Calls / Internal Calls / Alarm Clock** → **OK** →  (Select melody) → **OK** ( = on)

Activating/deactivation suppression of the first ringtone

The phone identifies an incoming SMS from the first network signal.

Menu → **6 min** **8 min** **9 min** **2 abc** **5 ju**
→ Enter digits: **0+** = make first ringtone audible; **1abc** = suppress first ringtone → **OK**

Please remember:

If first ringtone muting is deactivated, then every incoming SMS will be signalled by a ringtone. If you take this type of "call" at the first ringtone, you will lose the SMS.

Advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following tones can be activated and deactivated independently of each other:

- ◆ **Advisory tones:**
 - **Key click:** Each key press is acknowledged.
 - **Confirmation tone** (rising tone sequence): at the end of an entry/setting, when the handset is placed in the base station and on arrival of an SMS or a new entry in the calls list.
 - **Error tone** (descending tone sequence): when you make an incorrect entry.
 - **Menu end tone:** when scrolling at the end of a menu.
- ◆ **Battery warning tone:** The battery requires charging.

You cannot deactivate the confirmation tone for placing the handset in the base station.

Activating/deactivating advisory tones

Menu → **Audio Settings** → **OK** → **Advisory Tones** → **OK** ( = on)

Setting the battery warning tone

Menu → **Audio Settings** → **OK** → **Battery Low** → **OK** → **On / Off / During Call**
→ **OK** (√ = on)

The battery warning tone is activated or deactivated or sounds during a call.

Using the handset as an alarm clock

Activating/deactivating the alarm clock

Requirement:

The time is set (see page 8).

Menu → **Alarm Clock** → **OK** → **Activation**
→ **OK** (√ = on)

After you activate the alarm clock, the menu for setting the wake up time opens automatically.

If the alarm clock is set, the wake up time appears with the ☹ icon in the display.

Setting the wake up time

Menu → **Alarm Clock** → **OK** → **Wakeup time** → **OK** → Enter wake up timen
→ **OK**

When the alarm clock rings...


Press the display key **Off** or any key to deactivate the alarm clock for 24 hours.

If you do not press any key, the alarm clock switches off after one minute.

Restoring the handset default settings

You can reset any individual settings and changes that you have made. This will not affect entries in the directory, calls list, or SMS lists or the handset's registration on the base station.

Menu → **Settings** → **OK** → **Handset** → **OK**
→ **Reset Handset** → **OK**

Cancel the reset with .

Base station settings

The base station settings are carried out using a registered handset.

Changing the system PIN

You have to enter the system PIN when registering a handset on the base station.

You can change the base's 4-digit default system PIN ("0000") to a 4-digit PIN known only to yourself.

Menu → **Settings** → **OK** → **Base** → **OK**
→ **System PIN** → **OK** → **PIN:** → **OK**
→ **New PIN:** → **OK**

Should you forget the system PIN, you can reset the base station to the original code 0000:

Remove the mains cable from the base station. Press and hold down the registration/paging key (page 1) on the base station while you reconnect the mains cable to the base station. Release the key after a short while.

The base station is now reset and the system PIN is set to 0000.

Restoring the base station to factory settings

When the settings are restored all handsets are de-registered. Each individual setting is restored. Only the date and time are retained.

Menu → **Settings** → **OK** → **Base** → **OK**
→ **Base Reset** → **OK**

Operating the base station on the PABX

The following settings are only needed when your PABX requires them. Please refer to the user guide for your PABX.


You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Flash time

Setting the flash time

Menu → **6_{min}** **8_{sec}** **9_{sec}** **1_{sec}** **2_{sec}** → Enter digits for flash time: **0₊** = 80 ms;
1_{sec} = 100 ms; **2_{sec}** = 120 ms;
3_{sec} = 180 ms; **4_{sec}** = 250 ms;
5_{sec} = 300 ms; **6_{min}** = 600 ms;
7_{sec} = 800 ms → **OK**

Changing pause after line seizure

You can set the length of the pause inserted between pressing the talk key  and sending the phone number.

Menu → **6_{min}** **8_{sec}** **9_{sec}** **1_{sec}** **9_{sec}** → Enter digits for the current pause length: **1_{sec}** = 1 sec.; **2_{sec}** = 3 sec.; **3_{sec}** = 7 sec. → **OK**.

Changing the pause after the recall key

Menu → **6_{min}** **8_{sec}** **9_{sec}** **1_{sec}** **4_{sec}** → Enter the digits for the current pause length:
1_{sec} = 800 ms; **2_{sec}** = 1600 ms;
3_{sec} = 3200 ms → **OK**

Appendix

Symbols and typographical conventions used

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.



Enter digits or letters.

Menu

The display functions currently in the bottom display line are shown in reverse video. Press the relevant display key to launch the function.



Press the top or bottom of the control key, e.g. when scrolling.



/ **0+** / ***n** etc.

Press the illustrated key on the handset.

External Calls / Internal Calls (example)

Select one of the menu functions (**External Calls** or **Internal Calls**) from the list and press **OK**.

Menu → **Audio Settings** → **OK** → **Ringer Melody** (example) → **OK**

Press **Menu**. Select **Audio Settings** using and press **OK**. Select **Ringer Melody** using and press **OK**.

Care

- ▶ Wipe the base station and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

- ▶ **Switch the handset off and remove the batteries immediately.**
- ▶ Allow the liquid to drain from the handset.
- ▶ Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven, etc.).
- ▶ **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will generally be able to use it again.

Faults and Self-help with Troubleshooting

Not every fault is due to a defective phone. In certain circumstances, it can come from a brief interruption in the power supply to the base station (unplug/plug in power supply) or if the batteries of the handset are removed and inserted again. The following instructions should be of help for specific faults.

Important: problems or faults can only be remedied if you bring the complete unit (base station, handset, as well as connecting cable) to the place of purchase.

The display is blank.

1. The handset is not switched on.
 - ▶ Press and **hold** the end call key .
2. The battery is flat.
 - ▶ Charge the battery or replace it (page 6).

The handset does not respond to a key press.

The keypad lock is activated.

- ▶ Press and **hold** the hash key (page 12).

Base is flashing in the display. 1. The handset is outside the range of the base station. ▶ Move the handset closer to the base. 2. The base station is not switched on. ▶ Check the base station mains adapter (page 6).
Handset does not ring. The ringtone is switched off. ▶ Activate the ringtone (page 26).
You cannot hear a ringtone/dialling tone. Base station's phone cord has been replaced. ▶ When purchasing a new cord, ensure that it has the correct pin connections (page 6).
The incoming call number is not displayed although CLIP (page 11) is set. Phone number identification is not enabled. ▶ The caller should ask his/her network provider to check calling line identification (CLI).
You hear an error tone when keying an input (a descending sequence of tones). Action has failed/invalid input. ▶ Repeat the operation. Watch the display and refer to the operating instructions if necessary.

Warranty/Maintenance/Repair/Authorisation

Warranty

The warranty period is 2 years as of the date of purchase.

For warranty repair, the warranty card, filled out and stamped by the place of purchase must be included with the defective device.

Excluded from the warranty are damages due to improper use, wear and tear, or tampering by others. The warranty does not include consumed materials and deficiencies which only affect the value or capability for use inconsiderably.

In case of an error, please contact your place of purchase.

Repair/Maintenance

Rental devices

If your phone does not operate properly, notify Technical Assistance (phone number 175).

The repair* and the fault action are free of charge.

Purchased devices

Repair services are performed free of charge within the warranty period in accordance with the regulation of the warranty certificate). If a repair is necessary, the device must be returned to the place of purchase.

If Technical Assistance is made available (during the warranty period as well), the fault action is charged (route lump sum price as well as time expenses). The repair costs are additional outside the warranty period.

Batteries

Battery cells are considered consumed material, which is not covered by the warranty service. Defective batteries are not replaced free of charge. This applies to rental and purchased devices.

* except for damage to wearing parts (cables, labels, batteries etc.) and damage arising from incorrect handling such as dropping it or allowing fluid to penetrate into handset etc.

Help

If you have any general questions about products, services, etc., please contact your Swisscom Information Centre (toll-free number 0800 800 800).

Authorisation

This device is intended to be operated on the analogue Swiss network.

Country-specific conditions have been taken into account.

If you have any questions about the differences between the public phone networks, please contact your specialist dealer or network provider.

Swisscom hereby declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

CE 0682

The Declaration of Conformity can be found on the following web site:

www.swisscom.com under the rubric Online Shop, Phone, Declaration of Conformity or can be ordered from the following postal address:

Swisscom Fixnet AG

RES-Voice
Customer Premises Equipments (CPE)
3050 Bern

Technical data

Recommended batteries

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

- ◆ Sanyo Twicell 650
- ◆ Sanyo Twicell 700
- ◆ Sanyo NiMH 800
- ◆ Panasonic 700 mAh "for DECT"
- ◆ GP 700mAh
- ◆ GP 850mAh
- ◆ Yuasa Technology AAA Phone 700
- ◆ Yuasa Technology AAA 800
- ◆ VARTA Phone Power AAA 700mAh

The handset is supplied with two recommended batteries.

Handset operating times/charging times

The following information relates to batteries with a capacity of 650mAh.

Standby time	approx 165 hours (7 days)
Calling time	approx. 18 hours
Charging time	approx. 13 hours

The operating and charging times apply only when using the recommended batteries.

Base station power consumption

In standby mode: approx. 2 W






During a call: approx. 3 W

General specifications

DECT standard	is supported
GAP standard	is supported
Range	up to 250 m outdoors, up to 40 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20 % to 75 % relative humidity

Writing and editing a text message

The following rules apply when writing a text message:

- ◆ The cursor is controlled with  .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the hash key  **briefly** to switch from "Abc" mode to "123", from "123" to "abc" and from "abc" to "Abc" (uppercase: 1.st letter uppercase, all others lowercase). Press the hash key  **before** entering the letter.
- ◆ Press the hash key  **three times**: Shows the selection line of the characters assigned to the hash key.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lowercase letters.

 
Editing text

When you press a key and **hold** it, the characters of that key appear in the bottom display line and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field. For how to enter special characters, see page 32.

The display briefly shows whether uppercase or lowercase letters or digits are selected when you switch from one mode to the next: The bottom text line displays "abc -> Abc", "Abc -> 123" or "123 -> abc".

Order of directory entries

 
 

 
The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space (shown here as )
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Names that you have preceded with an asterisk will move to the end of the directory.

Entering special characters

Standard characters

				
	*)	**))		
1x	Space	Space	.	*
2x	1	↵	,	/
3x	£	1	?	(
4x	\$	€	!)
5x	¥	£	0	<
6x	□	\$	+	=
7x		¥	-	>
8x		□	:	%
9x			¿	
10x			i	
11x			"	
12x			'	
13x			;	
14x			—	

*) Directory and other lists

**) When writing an SMS

Accessories

Aton CL103 handset

Upgrade your phone to a cordless telephone system.

Aton CL103 handset

- ◆ Large keys, illuminated keypad
- ◆ Text and symbols are shown clearly in large type on the display
- ◆ Jumbo digits (uppercase)
- ◆ Direct dialling keys
- ◆ Compatibility with hearing aids (HAC)
- ◆ Handsfree operation
- ◆ Phonebook for around 100 entries
- ◆ SMS (prerequisite: CLIP available)
- ◆ Headset connection including headset
- ◆ Voice portal key



Aton CL103 charging station

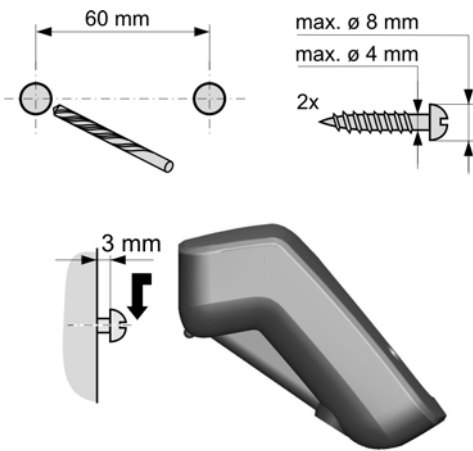
(including mains adapter)



All accessories and batteries are available from your mobile phone retailer or from the Swisscom shop.

Only use original accessories. This will avoid possible health risks and damage to property and also ensure that all the relevant regulations are complied with.

Wall mounting for base station



Index

A

- Accessories 33
- Activating
 - advisory tones 26
 - auto answer 25
 - keypad lock 12
 - SMS function 21
 - suppressing ringtone 26
- Activating/deactivating SMS function 21
- Advisory tones 26
- Alarm clock 27
- Answering machine, see also Network mailbox
- Auto answer 11, 25

B

- Base station
 - changing system PIN. 27
 - installing and connecting 5, 6
 - operating on PABX 28
 - power consumption 31
 - restoring default settings 28
 - setting 27
 - wall mounting 34
- Battery
 - charging. 8
 - display 1, 8
 - fitting. 6
 - icon 8
 - recommended batteries 31
 - warning tone 26

C

- Call
 - answering 11
 - caller listening in 25
 - internal 24
 - transferring (connecting) 24
- Call waiting, internal call 24
- Calling back caller 16
- Calling back from calls list 16
- Calling line identification 11
- Calls list. 15, 16
- Cancelling (operation) 12
- Care of the telephone 29
- Changing PIN. 27

- Changing system PIN. 27
- Characters
 - deleting. 13
- Charge status (battery) 1, 8
- Charge status display 8
- CLI, CLIP 11
- Confirmation tone. 26
- Connection socket for headset 1
- Control key. 1, 12
- Correcting incorrect input 13
- Customer Care 30

D

- Deactivating
 - advisory tones 26
 - auto answer 25
 - keypad lock 12
 - SMS function. 21
 - suppressing ringtone 26
- Dialling
 - directory 14
- Dialling mode 28
- Directory 14
 - opening 12
 - order of entries 32
 - selecting entry. 14
 - sending entry/list to handset 14
 - storing entry 14
 - storing the first number 14
- Display
 - changing display language. 25
 - in idle status 1
 - network mailbox message 23
 - number (CLI/CLIP) 11
 - setting 25
- Display keys 1, 12
- Displaying
 - phone number (CLIP). 11

E

- Earpiece volume 25
- Electricity consumption, see Power consumption
- End call key. 1, 11
- Entering flash 1
- Error tone 26

F

- FAQs 29

H

Handset	
activating/deactivating	11
advisory tones	26
contact with liquid	29
display language	25
idle status	12
loudspeaker volume	25
operating and charging times	31
registering	23
restoring default settings	27
searching for	24
setting (individual)	25
setting up for use	6
transferring a call	24
using several handsets	23
Handset charging times	31
Handset operating time	31
Handsfree operation	11
key	1
Hash key	1, 12
Headset	1
Hearing aids	4

I

Idle status (display)	1, 12
Incorrect input (correction)	13
Installing, base station	5
Internal	
listening in	25
making calls	24
Internal call	24
call waiting	24

K

Key click	26
Keypad lock	12
Keys	
control key	1, 12
display keys	1, 12
end call key	1, 12
handsfree key	1
hash key	1, 12
keypad lock	12
message key	16
on/off key	1
paging key	1
recall key	1
talk key	1

L

Last number redial	15
Liquid	29
List	
calls list	15, 16
draft message list (SMS)	19
entry	16
incoming message list (SMS)	20
last number redial list	15
missed calls	16
Listening in to call	25
Lock (keypad)	12
Loudspeaker volume	25

M

Mains adapter	4
Making calls	
answering a call	11
external	11
internal	24
Making cost-effective calls	17
Medical appliances	4
Menu	
back one menu level	12
end tone	26
menu guidance	13
overview	9
Message key	
opening list	20
opening lists	16
Missed call	16

N

Network mailbox	23
storing entry	23
Number	
displaying caller's number (CLIP)	11
entering the number of the network mailbox	23
setting for SMS centre	21
storing in directory	14, 15

O

On/off key	1
Operation (preparing to use the phone)	5
Order of entries in directory	32

P

- PABX
 - operating base station on PABX 28
 - setting dialling mode 28
 - setting flash time 28
 - SMS 21
- Pack contents 5
- Paging 1, 24
- Phone jack assignment 6
- Phone number
 - displaying caller's number (CLIP) . . . 11
- Power consumption (base station) . . . 31
- Q**
- Questions and answers 29
- R**
- Recall key 1
- Registering (handset) 7, 23
- Registration wizard (SMS) 18
- Restoring default settings
 - base station 28
 - handset 27
- Ringtone
 - changing 26
 - setting melody 26
 - setting volume 12, 26
 - suppressing 26
- S**
- Safety precautions 4
- Searching
 - handset 24
 - in directory 14
- Sending
 - directory entry to handset 14
 - SMS 19
- Setting date 8
- Setting flash time (PABX) 28
- Setting melody (ringtone) 26
- Setting time 8
- Setting volume
 - earpiece 25
 - handset loudspeaker 25
 - loudspeaker 25
 - ringtone 26
- Setting wake up time 27
- Shortcut (digit combination) 9
- SMS 18
 - deleting 19
 - draft message list 19
 - forwarding 20
 - incoming message list 20
 - reading 19
 - registration wizard 18
 - replying to and forwarding 20
 - self help with error messages 22
 - sending 19
 - to PABX 21
 - troubleshooting 22
 - writing 19
 - writing text 32
- SMS centre
 - changing number 21
 - setting 21
- Special characters 32
- Speed dialling
 - network mailbox 23
- Speed dialling list 15
- Suppressing
 - first ring 26
- T**
- Talk key 1
- Technical data 31
- Text message, see SMS
- Troubleshooting 29
 - SMS 22
- V**
- Viewing network mailbox message . . . 23
- Volume
 - ringtone 26
- W**
- Wall mounting for base station 34
- Warning tone (battery) 26
- Writing, editing text 32

This user guide is made with 100% recycled paper.